

Delta Food Warmer Operation Manual



ESM12—Delta Food Warmer
Please read these instructions carefully.

IMPORTANT SAFETY INSTRUCTIONS

BE SURE THAT THE CRUMB TRAY IS IN PLACE BEFORE YOU TURN THE POWER ON!

GENERAL INFORMATION

- Carefully read these operating instructions as they contain important information for the safe and correct use of the appliance.
- It is advisable to keep the operating instructions in a place where you have them always ready on hand.
- If you pass the appliance to a third party these operating instructions should be handed over.
- As soon as you have unpacked the food warmer, check whether everything is in a faultless condition. If anything is damaged, do not connect the appliance as such, but inform your dealer.
- Dispose the packing materials according to the local regulations. All the packaging items (Plastic bags, cardboards, polystyrene foam, nails, etc.) must not be left within reach of children as they are potential sources of danger.
- Before connecting the appliance make sure that the tension indicated on the identification plate compliances with the tension on your electricity mains.
- The unit is manufactured for commercial use, mainly for KEEPING FOOD WARM. Improper use may cause damage and will void the warranty.
- In case of fault and/or malfunction, switch the appliance off. Pull the power plug out and inform your dealer for a repair with original spare parts.
- Please observe the local regulations concerning accident prevention and disposal.
- The manufacturer/dealer cannot be made responsible for damages which arise through of observing these operating instructions. Apart from this, if these instructions are not observed, the safety of the appliance is of longer guaranteed.

SAFETY NOTES

- The appliance may be used only in perfect condition by trained personnel.
- Use the appliance only on a stable, flat, and heat-resistant surface and make sure that clearance exists for good air circulation. There must be no combustible materials near the appliance.
- Do not use the appliance outdoors.
- The appliance may be connected to a grounded socket only. Do not connect any other appliance to the same socket. The outlet must be easily accessible, so that the plug can be easily removed in the case of an emergency.
- Always pull the plug out of the socket and not with the cable. Switch off the appliance beforehand.
- The cable must not hang over table edges and/or sharp edges. It must also not come into contact with the hot appliance surface or with water.
- Regularly check the cable. If it is damaged, it must be replaced by a qualified specialist.
- Do not leave the food warmer unattended while in use. Children are not able to realize dangers when handling electronic appliances.
- Be careful because outer surfaces are heated during operation.
- Do not move the food warmer when in use or if food is in it.
- Before each cleaning or repair, switch off the appliance. Then pull the power plug out of the socket. Allow the appliance to cool down. Clean the surface with a soft, damp cloth.
- **The appliance must not be hosed down with water.**
- Do not attempt to repair the appliance by yourself. Repairs may only be undertaken by a qualified specialist using original spare parts.
- If you don't use the appliance for an extended period of time, pull the power plug from the socket, clean the appliance and cover it with an air-permeable material.

PUTTING INTO OPERATION

1. Clean the appliance with a damp cloth, wipe it dry and put the food into the appliance.
2. Switch on the appliance.
 - NOTE: a smell at the beginning is normal. It comes from the heating elements.
3. Ensure the appliance is unplugged when it is not in use, and when being cleaned.

PUTTING INTO OPERATION

1. Clean the appliance with a damp cloth, wipe it dry and put the food into the appliance.
2. Switch on the appliance.
 - NOTE: a smell at the beginning is normal. It comes from the heating elements.
3. Ensure the appliance is unplugged when it is not in use, and when being cleaned.

CLEANING

- For hygienic reasons, the food warmer should be cleaned daily.
- Switch off the appliance and allow it to cool down.
- Use a damp cloth with a mild, non-abrasive, detergent and wipe it dry.
- Never immerse the appliance into water.
- Never wash it by water jet.

WASTE DISPOSAL

- For the disposal of the food warmer please consider and act accordingly to the national and local rules and regulations.