



WARNING

Before installation and commisioning, you must read the safety instructions and warnings carefully and all the warning labels attached to the equipment.

IMPORTANT

Failure to comply (even partially) with the instructions given in this manual will invalidate the product warranty and relieves the manufacturer of any responsibility



IMPORTANT

The alteration of machine operation, design or the replacement of parts not approved by the manufacturer may void warranties and approvals.



IMPORTANT

This machine is intended for commercial use only.

CONTENTS

Safety Instructions	3
Installation	
Installation Diagram	
Operating Procedures	
User Programming	
Troubleshooting	
Wiring Diagram	
Accessories	
Parts	11

We have checked that the contents of this document correspond to the model described. There may be discrepancies nevertheless, and no guarantee can be given that they are completely identical. The information contained in this document is reviewed regularly and any necessary changes will be included in the next edition. We welcome suggestions for improvement.

Specifications and document subject to change without prior notice.

Information supplied in this manual is copyright. No part of this work may be reproduced or copied in any form or by any means, electronic or mechanical without the express permission of the author / publisher.

Service 0800 782 754 Parts 09 829 0930



Manufactured in New Zealand by Washtech Ltd. 414 Rosebank Road, Avondale, Auckland 1026. PO BOX 90548, Auckland

Safety Instructions

WARNING



Equipment contains dangerous voltages and can be hazardous if installed or operated incorrectly. Non-compliance with warnings or failure to follow the instructions contained in this manual can result in loss of life, severe personal injury or serious damage to property.

Installation

- Use qualified, skilled personnel
- Follow installation instructions
- Connect to correct voltage and supply current
- Provide fully accessible electrical Isolation Switch & water supply valves

Training and Supervision

- · Read and understand the Operating instructions and train all staff
- This appliance must not be operated by children or infirm persons
- Machine panels must only be removed by suitably qualified and trained personnel
 internal hazards include live electrics and very hot surfaces
- This appliance is not intended for use as a stepladder

Hot Surfaces

· Some surfaces may be hot or very hot

Chemicals

- · Commercial dishwashing detergents are hazardous handle with care
- Read and follow the safety information found on the labels of detergent containers and Material Safety Data Sheets
- Use protective eyewear and clothing if decanting containers

Hot Water

- Do not put hands in wash water which may be over 60°C and contain hazardous caustic detergent
- Rinse water can be over 90°C
- Door safety switches are designed for emergency use only

Cleaning

- · Do not hose down the machine or splash water over the exterior
- · Watch for broken glass etc when cleaning the inside of the machine

Service/repair

- · Under no circumstances the user should attempt to carry out repairs
- All service/repair work must be carried out by qualified personnel only

Power Cord Replacement

• If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard

Installation Checklist



WARNING

Installer must be suitably qualified and ensure compliance with all codes and standards including AS/NZS3500.1.

Unpack

· Unpack the machine, check for damage and complete delivery.

Positioning

- · Place machine on sound waterproof self draining floor and adjust feet to level
- · Allow room for adjacent chemical containers

Water

- Flush supply lines before connection
- · Connect hose supplied to adjacent accessible isolator valve 20 mm 3/4 male
- Flow rate required 15 litres per minute
- Temperature 65°C
- Consumption per cycle 2.6 litres
- Pressure required 200-350 kPa fit limiter above this pressure
- · Back Flow Atmospheric Vacuum Breaker
- Potable water quality is required filter or soften if necessary

Water Quality Requirements

Hardness		ppm			рН	
min		20			7	
max		100			8	
lons	Cl-	SO ₄	Fe	Mn	Cu	Cl_2
Max mg/L	100	400	0.1	0.5	0.05	0.1

Power

- Machine shipped with cordset for 15 A 230V 50Hz via adjacent switched outlet.
- Easily upgradeable to single phase 25 A 230V 50Hz or three phase 15 A per phase 400V 50Hz

Waste

· Connect drain pump hose supplied to vented upstand or sink waste connection

Detergent

- · Insert hose into container of commercial dishwasher low foam detergent
- · Adjust detergent dosing and prime detergent using the keypad (refer to page 7)
- Use good quality chemicals and regularly check containers

Rinse Fluid

- · Insert hose into container of commercial dishwasher rinse fluid
- Adjust rinse fluid dosing and prime rinse aid using the keypad (refer to page 7)
- Use good quality chemicals and regularly check containers


Operation

· Run several cycles, ensure that operator has read and understands instructions

Troubleshooting Installation

• If machine doesn't fill after switching on power, check & ensure that hot water supply tap is open and water supply pressure is not below specification.

UL Installation Diagram UL-S INST 06-06-14 3A

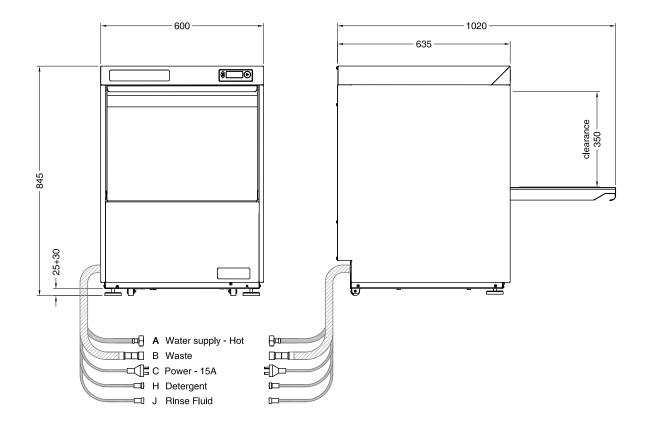

All dimensions in millimeters

UL Operating Instructions



START

- Turn on at wall
- Ensure the Wash filter (3) is in place
- Ensure the Scrap tray (2) and Filter basket (1) are in place and shut door
- Press Power button for 3 seconds to turn machine on and begin the fill cycle

OPERATION

- Select cycle using Up/Down buttons (use the Heavy cycle whenever possible)
- Press Start button (once this is Green or Orange) to begin washing
- Timer counts down to 00 then resets after door is opened

START BUTTON COLOURS

▶ White = machine is filling

Red = cycle is running

Green = rinse water is up to temperature

Purple = door is open

Orange = machine is heating

Blue = power saving mode

NOTE: The machine may be started while Orange light is on and while rinse water is being heated and the timer will pause at 22 seconds until rinse water is up to 83 degrees

SHUT DOWN - EVERY NIGHT

Select Drain cycle via Up or Down buttons and press Start button

When Drain cycle is finished after 100 seconds, remove and rinse filter basket (1) and

Scrap tray (2) before replacing back in machine

CLEANING - AT LEAST ONCE A WEEK

Remove, rinse and replace:

Filter basket Scrap tray

Wash filter 3 Rinse Arms 4

Wash Arm 5


6 Thumbscrews

Inspect and clear all jets in the wash and rinse arms

SUGGESTED BEST PRACTICE

Pre-rinse Scrape and/or rinse plates and glasses in cool water

Chemical Use good quality non foaming commercial detergent and drying agent Do not use domestic detergent which will cause the machine to foam

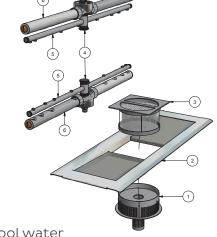

User Programming

The **User Settings** menu is accessed by pressing the UP and DOWN keys simultaneously for 5 seconds, the screen should then change to:



Press the POWER button to scroll between settings.

Press the UP and DOWN keys to change a specific setting,

Press the START button to return to the operator screen.

The programming options are specified in the table below:

User Settings	Factory Setting	Selection
Power Save	ON	ON/OFF
Detergent Prime	OFF	ON/OFF
F-Detergent Injection Time	40	0 - 180 secs
W-Detergent Injection Time	15	1 - 30
RInse Aid Prime	OFF	ON/OFF
W-Rinse Aid Time	12	1 - 30
Display Contrast	27	10 - 40

Power Save function reduces the rinse temperature setting by 10°C when the machine is idle for 5 minutes or more. The temperature settings return to the set value when door is opened or START/STOP key is pressed.

Detergent Prime function allows manual operation of the detergent pump to fill the detergent hose with chemicals. Press UP key to switch the detergent pump on, DOWN key to switch the pump off. If the detergent pump is turned on and left running, it will stop automatically after 1 minute of operation.

F-Detergent Time controls the operation time of the detergent pump during the fill of the wash tank. The factory settings for passthrough models – 80 seconds.

W-Detergent Time sets the injection time of the detergent pump at the beginning of each wash cycle. Ex-factory setting is 15 seconds as board default.

Rinse Aid Prime function allows manual operation of the rinse aid pump to fill the rinse aid hose with chemicals. Press UP key to switch the rinse aid pump on, DOWN key to switch the pump off. If the rinse aid pump is turned on and left running, it will stop automatically after 1 minute of operation.


W-Rinse Aid Time controls the injection time of the rinse aid peristaltic pump. The rinse aid pump is set to operate at the beginning of each wash cycle. Ex-factory setting is 12 seconds as board default.

Troubleshooting

If an error message appears on the control display first try turning the machine OFF for 30 seconds and then back ON. If the error message remains call for service.

Issue	Resolution
Not filling	Check water supply is on and door is closed
Refills during Wash	Check Drain upstand is fitted
Cycle does not start	Check door is closed
Wash too long	Check water supply temperature - wash stops at 22 seconds if rinse is still heating
Foaming Wash	Excessive use of rinse fluid and/or low wash temperature can cause foaming
Poor Results	Read and carefully follow the machine installation, operating and care procedures
	All of the following is actually in the instructions on previous pages of the manual
	Pre-scrap and pre-rinse washware
	Do not overload dishracks - avoid overlap of plates, wash cutlery unsorted, handles up
	Use quality low foam detergent and rinse fluid - check containers and adjustment
	Use heavy cycle - baked on soil requires pre-scraping and/or pre-soaking
	Remove and check wash & rinse arms & jets are clean and rotating freely
	If plates are not pre-rinsed wash water may need changing regularly
	Check wash and rinse temperatures
	Remove rack when cycle ends and leave on the bench a few minutes for drying

UL(S) Wiring Diagram

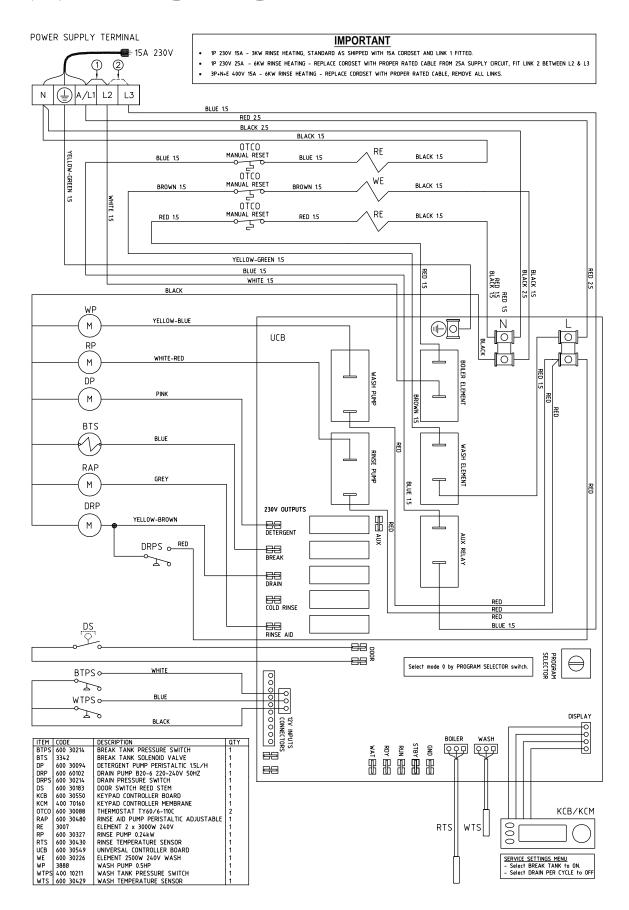

Accessories

600 70029 CUPRACK CB 500mm X 75mm high 600 70028 DISHRACK P12/18 500mm 18 DISH 1 C660503 CUTLERY CONTAINER G 1 600 60080 HOSE SS 2M 1 C440201 RUBBER FOOT D.60 X 10 2 ELECTRICAL WIRING DIAGRAM OPERATOR MANUAL 1 OPERATOR MANUAL 1 212 10049 SCRAP TRAY ASSEMBLY ****CHECK IN MACHINE**** 212 10046 WASTE BASKET ASSEMBLY ****CHECK IN MACHINE**** 212 10046 WASTE BASKET ASSEMBLY ****CHECK IN MACHINE****		QTY
DISHRACK P12/18 500mm 18 DISH 1		
CUTLERY CONTAINER G 1 600 60080 HOSE SS 2M 1 C440201 RUBBER FOOT D.60 X 10 2 ELECTRICAL WIRING DIAGRAM FRONT COVER 1 OPERATOR MANUAL 1 212 10049 SCRAP TRAY ASSEMBLY 1 ***CHECK IN MACHINE**** 212 10004 WASH FILTER ASSEMBLY 1 ***CHECK IN MACHINE**** 212 10046 WASTE BASKET ASSEMBLY 1	MSMA	
HOSE SS 2M C440201 RUBBER FOOT D.60 X 10 ELECTRICAL WIRING DIAGRAM OPERATOR MANUAL 1 212 10049 SCRAP TRAY ASSEMBLY ***CHECK IN MACHINE*** 212 10004 WASH FILTER ASSEMBLY 1 ****CHECK IN MACHINE*** 212 10046 WASTE BASKET ASSEMBLY 1		
ELECTRICAL WIRING DIAGRAM OPERATOR MANUAL 1 212 10049 SCRAP TRAY ASSEMBLY ***CHECK IN MACHINE*** 212 10004 WASH FILTER ASSEMBLY ***CHECK IN MACHINE*** 1 ***CHECK IN MACHINE*** 1 ***CHECK IN MACHINE***		1
OPERATOR MANUAL 212 10049 SCRAP TRAY ASSEMBLY ***CHECK IN MACHINE*** 212 10004 WASH FILTER ASSEMBLY ***CHECK IN MACHINE*** 212 10046 WASTE BASKET ASSEMBLY 1		2
212 10049 SCRAP TRAY ASSEMBLY ***CHECK IN MACHINE*** 212 10004 WASH FILTER ASSEMBLY ***CHECK IN MACHINE*** 212 10046 WASTE BASKET ASSEMBLY 1	ELECTRICAL WIRING DIAGRAM FRONT	1
SCRAP TRAY ASSEMBLY ***CHECK IN MACHINE*** 212 10004 WASH FILTER ASSEMBLY ***CHECK IN MACHINE*** 212 10046 WASTE BASKET ASSEMBLY 1	OPERATOR MANUAL	1
WASH FILTER ASSEMBLY ***CHECK IN MACHINE*** 212 10046 WASTE BASKET ASSEMBLY 1	SCRAP TRAY ASSEMBLY	1
WASTE BASKET ASSEMBLY 1	WASH FILTER ASSEMBLY	1
	WASTE BASKET ASSEMBLY	1

Parts

Description	Part No.
Controls & Indicators Digital Tempareture Sensor 500mm Digital Temperature 1000mm Door Reed Switch Pressure Switch Break Tank & Drain Pressure Switch Fill GL/UL WI200 Controller PCBA WI200 Keypad Membrane WI200 LCD Interface PCBA	600 30429 600 30430 600 30183 400 10214 400 10211 600 30549 400 70160 600 30550
Heating Components Rinse Element 2x3kW (from s/n 144621) Rinse Element 2x3kW (before s/n 144621) Wash Element 2.5kW	600 30496 3007 600 30226
Hose & Fittings Hose Drain Pump 2.5m Hose Drain Pump Outlet Pressure Switch Hose (520mm) Rinse Hose Upper Wash Hose	600 60105 6197 3067 600 60073 400 90012
Pumps & Solenoids Detergent Pump Detergent Pump Hose Detergent Squeeze Tube Drain Pump Rinse Aid Pump Adjustable Rinse Aid Squeeze Tube Rinse PUmp Solenoid Valve Wash Pump	600 30094 600 30148 600 30134 600 60102 600 30480 600 30119 600 30327 3342 3888
Wash Tank Components Rinse Arm Assembly Wash Arm Assembly	260 10097 326 10030

Information supplied in this manual is copyright. No part of this work may be reproduced or copied in any form or by any means, electronic or mechanical without the express permission of the author/publisher

Manufactured in New Zealand by Washtech Ltd.

WASHTECH

414 Rosebank Road Avondale Auckland 1026 New Zealand

PO Box 90548, Auckland

E-mail info@washtech.co.nz web www.starline.co.nz

ISO9001

All Washtech products are designed and manufactured by Washtech using the internationally recognised ISO9001 quality management system, covering design, manufacture and final inspection, ensuring consistent high quality at all times.

In line with policy to continually develop and improve its products, Washtech Ltd reserves the right to change specifications and design without prior notice.

an Ali Group Company



The Spirit of Excellence