



# INSTRUCTION MANUAL

Summit Undercounter Stainless 1 door Chiller – ERE46

Summit Undercounter Stainless 1 door Chiller – ERE47



*Please read the user's manual before you use this product.*



## **Content:**

1.Preface.....	2
2.Use of the equipment.....	5
3.Technical features.....	5
4.Control unit.....	5
5.Handling.....	6
6.Installation procedure.....	6
7.Connecting to the main power supply.....	6
8.Maintenance instructions.....	7
Cleaning.....	7
Cleaning the refrigerator surface.....	8
Cleaning the inside of the refrigerator.....	8
Cleaning the condenser.....	8
9.Troubleshooting.....	8
10.Technical service.....	8
11.Configuration Sketch Map.....	9
Operating Instruction.....	10
Correct disposal of this product.....	12
Technical Parameters.....	13
Official Approval And Rules.....	14
Warranty.....	15



## 1. Preface

Please read instructions before using this appliance.

### IMPORTANT SAFETY INSTRUCTION

- ▲ To reduce the risk of fire, electric shock, or injury to persons when using your product, basic safety precautions should be followed, including the following.
- ▲ This appliance must be properly installed and located in accordance with the Installation Instruction before it is used.
- ▲ Before the appliance is plugged in, ensure that the rated voltage corresponds to the voltage of the electrical system in your home/restaurant. The power plug should have its own independent socket. Using adapters may cause overheating or burning.
- ▲ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- ▲ Children shall not play with the appliance.
- ▲ Cleaning and user maintenance shall not be made by children without supervision.
- ▲ If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- ▲ Connect to properly grounded outlets only. Avoid the use of extension cords. Do not run cord under carpeting, runners or the like. Arrange cord away from traffic area and where it will not create a tripping hazard.
- ▲ Always unplug appliance when not in use and before cleaning, adjusting or maintaining this machine. To disconnect appliance, turn switch off and remove plug from power source.



- ▲ Do not disconnect by pulling on the cord. Always disconnect by grasping and pulling on the plug top.
- ▲ Do not pull out the cord or touch the power plug with wet hands. Clean water or dust from the power plug and insert it with the ends of the pins securely connected.
- ▲ Do not use outdoors.
- ▲ Do not splash water on the appliance. It may cause a malfunction or electric shock.
- ▲ Do not disassemble, repair or alter the appliance. It may cause fire or abnormal operations, which may lead to injury.
- ▲ After your fridge-freezer is in operation, do not touch the cold surfaces in the freezer compartment, particularly when hands are damp or wet. Skin may adhere to these extremely cold surfaces.
- ▲ Never place glass products in the freezer because they may be broken when their inner contents are frozen.
- ▲ The refrigerant and insulation blowing gas used in the appliance require special disposal procedures. When disposal, please consult with service agent or a similarly qualified person.
- ▲ Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- ▲ **WARNING:** Keep clear of obstruction all ventilation openings in the appliance enclosure or in the structure for building-in.
- ▲ **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- ▲ **WARNING:** Do not damage the refrigerant circuit.
- ▲ **WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.



**Warning: Risk of fire / flammable materials**

**CAUTION: RISK OF FIRE AND EXPLOSION WITH FLAMMABLE REFRIGERANT R600a/ R290.**

▲ If you need the electronic version instruction manual, please ask the manufacturer or its service agent .

▲ Max. Load of shelf is 80 kg.

This instruction manual provides all the necessary information regarding:

- ▲ use of the refrigerator
- ▲ technical specifications
- ▲ installation and handling
- ▲ operator procedures and instructions
- ▲ maintenance operation

The manual is to be considered an integral part of the refrigerator and should be stored in a safe place for further consult to permit a good working life of the refrigerator.

The appliance is intended for commercial use only.

**The manufacturer cannot be held liable in the following cases:**

- improper installation (not in accordance with the guidelines indicated herein)
- misuse of the refrigerator
- power supply defects
- improper or inadequate maintenance
- unauthorised modification or tampering
- use of non-original spare parts
- partial or total failure to comply with the instructions

All electrical equipment can be hazardous to health. Current standards and legal requirements must be complied with during the installation and use of any equipment.



## **2. Use of the equipment**

The refrigerator are for preserving fresh perishable foodstuffs, with an in-built refrigerated unit.

The operating temperature for refrigeration is:

- between +2°C and +8°C at room temperature of +43°C an 40%RD. Climate class 4/5 .

The operating temperature for frozen food maintenance is:

- between -22°C and -18°C at room temperature of +43°C an 40% RD. Climate class 4/5 .

## **3. Technical features**

The refrigerator is a ventilated system, the evaporator is in a separate insulated box on the top. All the materials used in the manufacture of this unit are guaranteed to be suitable for use with foodstuffs. The gases used in refrigerator is R600a; in the freezer is R290.

## **4. Control unit**

The refrigerator is controlled from a “digital control unit” and a “main switch pilot light” in the top panel of the refrigerator.

The “main switch pilot light” is for turning on the power supply.

The green pilot light comes on to indicate that the unit is connected to the main electricity and to start work.

The green pilot light comes off to indicate that the unit is disconnected and doesn' t work. The “digital control unit” is for the regulation of all parameters to provide the correct working of the refrigerator. Please consult all parameters in the attachment manual of the “digital control unit”. This attachment manual of “digital control unit” is part of the instruction manual and is very important in case of service.




## 5. Handling

The refrigerator arrives in PET film and packed in cardboard box on a wood pallet.



The refrigerator must be transported and handled with care to avoid posing a hazard to persons or property.


Never place a refrigerator with an in-built refrigerated unit on its side or turn it upside down as this may damage or impair operation

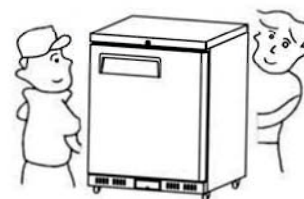

of the refrigerated unit. We cannot be held liable for any damage or defects arising directly or indirectly from improper handling of the equipment or non-compliance with the safeguards illustrated above.

## 6. Installation procedure

▲ Place the refrigerator in the coolest and best ventilated part of the room. Don't install the refrigerator in the near of heat and direct sunlight sources.

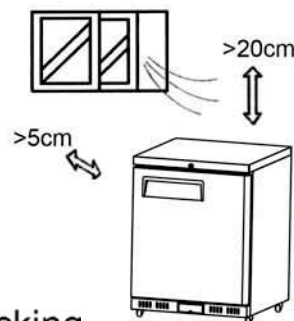

▲ Remove the straps securing the cardboard packing  
Remove the cardboard. Covering  
Remove the PET protection film

▲ Clean the refrigerator with mild detergent and then dry it with a soft cloth.



## 7. Connecting to the main power supply




This operation must be carried out by professionally and qualified persons.

The refrigerator is supplied complete with a power supply cable for the connection to the main power supply. A




thermomagnetic circuit breaker (not supplied) must be installed between the mains power point and the power supply cable of the refrigerator.

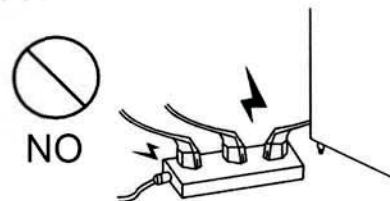

**Before operation make sure that:**

▲ the mains voltage corresponds to the voltage on the refrigerator 220–240V/50Hz/1Ph; to ensure proper operation it is essential for the power supply voltage to come within a range of +/- 10% of the unit's rated voltage

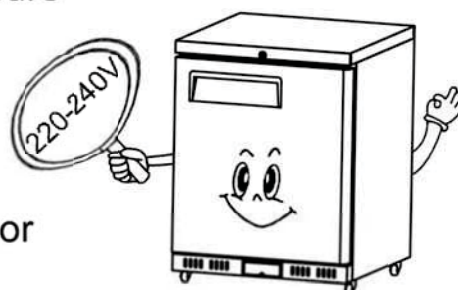

▲ the electronic system to which the refrigerator is connected is made in compliance with current standard requirements

▲ the electric connections and the installation of the thermomagnetic circuit breaker have to be done by qualified person.

**Connecting steps:**

- ▲ Install a thermomagnetic circuit breaker suited to the rated output of the unit being installed
- ▲ Connect the refrigerator unit to the thermomagnetic circuit breaker outlet
- ▲ Check that the refrigerator is in order as demonstrated by the pilot light incorporated in the main switch coming on

**8. Maintenance instructions**

The smooth operation and life of the equipment are mainly determined by correct and regular maintenance

**Cleaning:**

Regular cleaning of the refrigerator unit is strongly recommended each month. Please follow the instructions below.




Disconnect the refrigerator power supply cable from the mains prior to carrying out any type of cleaning operation.

### **Cleaning the refrigerator surface:**

Clean the refrigerator with mild detergent and then dry it with a soft cloth.

Do not use abrasive detergents!

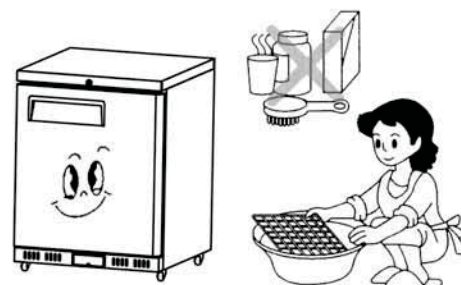


### **Cleaning the inside of the refrigerator:**

Clean the inside area at least each month with a detergent suitable for use with foodstuffs.

### **Cleaning the condenser:**

For an efficient operation of the refrigerator it is advisable to clean the condenser regularly approx. every 4 months with a dry brush or vacuum cleaner.

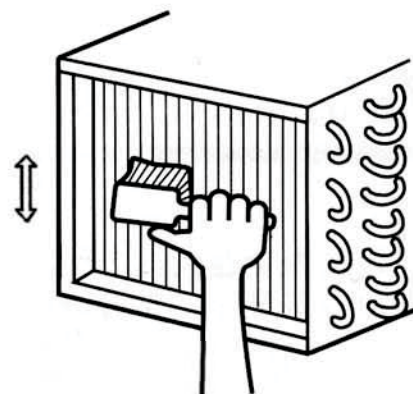

## **9. Troubleshooting**

Refrigerator stops working (light off):

- ☆ Power supply failure

#### **▲ Remedies:**

- ☆ Check that the plug is inserted properly in the socket
- ☆ Check that the switch on/off
- ☆ Check that the mains voltage powers the plug

Refrigerator temperature go up:

- ☆ Unit too near to a heat source
- ☆ Condenser dirty or blocked

#### **▲ Remedies:**


- ☆ Move the product or the heat source further away
- ☆ Clean the condenser

## **10. Technical service**



For technical service please contact the dealer technical department and give him the serial №, and the date of purchase.

## 11. Configuration Sketch Map

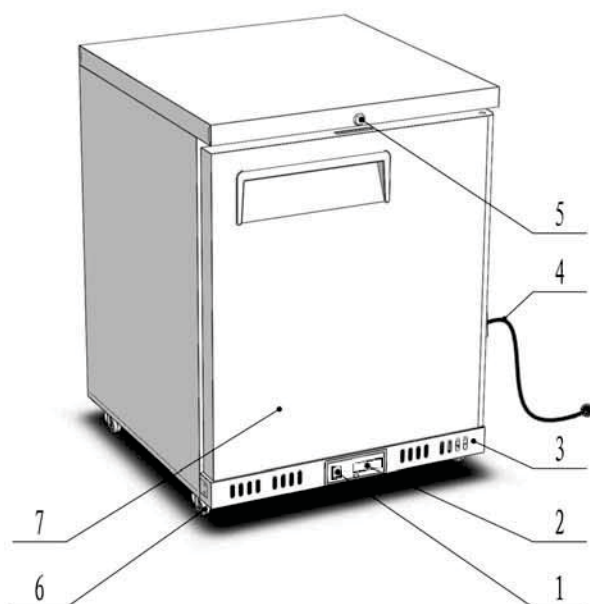

1. Power switch
2. Digital controller
3. Front top panel
4. Power cord and power plug
5. Lock
6. Adjustable feet / wheels
7. Door

Our products have been modified precisely before leaving factory, so to avoid damaging compressor unit or other malfunctions, users mustn' t modify the microcomputer parameters privately.



## Operating Instruction



1. New upright air-cooling refrigerator should be opened and ventilate it before it is in use.
2. After connecting the power supply, press the "POWER" switch on the controller keyboard (Green Indicator Light ON), the fridge will come to work. The microcomputer controller, installed in the controller keyboard, could automatically adjust the temperature ranges. This intelligent digital controller works as: if the temperature increases and reaches set point plus differential the compressor is started and then turned off when the temperature reaches the set point value again.

3. Microcomputer Controller Operation Instruction:

4. Microcomputer panel sketch map, meanings of running indicator light and LED showing.



(Mod. XR06CX)

5. **SET** To display target set point, in programming mode it selects a parameter or confirm an operation.

To start a manual defrost.

In programming mode it browses the parameter codes or increases the displayed value .

In programming mode it browses the parameter codes or decreases the displayed value .

To lock or unlock the keyboard

**SET**+ To enter in programming mode

**SET**+ To return to room temperature display .

6. How to see the point .

LED	MODE	SIGNIFICATO
	On	Compressor enabled
	Flashing	Anti short cycle delay enabled (AC parameter)
	On	Defrost in progress
	Flashing	Dripping in progress
	On	Fans output enabled
	Flashing	Fans delay after defrost
	On	Measurement unit
	Flashing	Programming mode
	On	Measurement unit
	Flashing	Programming mode



Push and immediately release the SET key, the set point will be showed;  
Push and immediately release the SET key or wait about 5s to return to normal visualisation.

#### 7. How to change the setpoint .

Push the SET key for more than 2 seconds to change the Set point value;  
The value of the set point will be displayed and the “°C” or “°F” LED starts blinking;

To change the Set value push the  $\blacktriangle$  or  $\blacktriangledown_{AUX}$  arrows.

To memorise the new set point value push the SET key again or wait 10s.

#### 8. How to start a manual defrost .

Push the DEF  $\text{❄}$  key for more than 2 seconds and a manual defrost will start .

#### 9. How to change a parameter value

To change the parameter's value operate as follows:

Enter the Programming mode by pressing the **SET+ $\blacktriangledown$**  keys for 3s  
(“°C” or “°F” LED starts blinking).

Select the required parameter. Press the “SET” key to display its value  
Use  $\blacktriangle$  or  $\blacktriangledown_{AUX}$  to change its value.

Press “SET” to store the new value and move to the following parameter.

To exit: Press **SET+ $\blacktriangle$**  or wait 15s without pressing a key.

NOTE: the set value is stored even when the procedure is exited by waiting the time-out to expire.

#### 10. To lock the keyboard .

Keep pressed for more than 3s the  $\blacktriangledown+\blacktriangle$  keys.

The “OF” message will be displayed and the keyboard will be locked.

If a key is pressed more than 3s the “OF” message will be displayed.

#### 11. To unlock the keyboard .

Keep pressed together for more than 3s the  $\blacktriangledown+\blacktriangle$  keys till the “on” message will be displayed .



## 12. Alarm signalling .

Mess.	Cause	Outputs
"P1"	Room probe failure	Compressor output according to "Cy" e "Cn"
"P2"	Evaporator probe failure	Defrost end is timed
"HA"	Maximum temperature alarm	Outputs unchanged
"LA"	Minimum temperature alarm	Outputs unchanged
"EA"	External alarm	Outputs unchanged
"CA"	Serious external alarm	All outputs OFF
"dA"	Door Open	Compressor and fans restarts

## Correct disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



## Technical Parameters

Product (EN)	Model	Rated voltage	Rated power (W)	Current (A)	Volume (L)	Safety climate class	Refrigerant	Amount (g)	LED Lamp (W)	Dimension D x W x H (mm)	Net volume (L)	Energy consumption over 24 hours (E24h)	Annual energy consumption (AEC)	Energy efficiency index (EEI)	Energy efficiency class
Back Bar Chiller	ERE46	220-240V, 50Hz	150	0.8	105	4, 5	R600a	50	0	605×635×825	84	0.7687	280	14	A+
Back Bar Freezer	ERE47	220-240V, 50Hz	300	1.4	105	4, 5	R290	50	0	605×635×825	84	2.6789	978	34	B

① The volume value in the table is calculated by putting one shelf in the bottom position.



## OFFICIAL APPROVAL AND RULES

Our products full fill the present E.U. rules, including the CE mark of the European official approval

Machinery Directive (MD) 2006/42/EC

Electromagnetic Compatibility (EMC) Directive 2014/30/EU

EN 60335-1

EN 55014-1

EN 60335-2-89

EN 55014-2

EN 62233

EN 61000-3-2

EN 61000-3-3



Serial № C003-106-076



# Warranty

## **Southern Hospitality—EuroChill Warranty Document**

This Document covers Summit and Compact ranges

EuroChill Refrigeration products offer a 2 year Warranty on the Summit range of chillers and freezers. And a 1 year warranty on the Compact range of chillers and freezers

### **Warranty:**

This warranty is for parts and labour for a period of:

- 24 months from the date of invoice for the Summit range.
- 12 months from date of invoice for the Compact range.

This warranty is for normal hours of work, 7:30–5:00 Monday to Friday, except on public holidays.

### **Warranty Procedure:**

To report a problem with your cabinet, please contact the Service and Spares Division on:

- 0800 504 504 for New Zealand/Pacific Islands
- 1300 065 640 for Australia.

Please have serial number, invoice and date of purchase information as well as a description of the fault.



### **On receiving your cabinet:**

1. Check the packaging for damage.
2. Remove item from packaging material and then check again for damage. If damaged, contact your supplier immediately
3. Check that you have received the correct model cabinet (refer to the serial number plate for model number) The serial number will be reflected on your invoice.
4. Cabinet to be leveled and stabilized on the floor when in final position. Try to avoid direct sunlight and excessive heat from other kitchen equipment
5. Ensure there is sufficient ventilation.
6. Position shelving.
7. Check that the power supply matches that of the cabinet. This will be shown on the serial plate of the cabinet
8. Allow the cabinet to remain standing, unplugged for 30 minutes.
9. Check that there are no obstructions and that nothing is blocking the fans or motors that may prevent them from safe operation.
10. Keep All air vents and ducts clear
11. Turn the power on
12. Check the controller is set to the correct temperature setting. +2°C for chiller and -18 ~ -20°C for freezers
13. Allow the system to operate for 24 hours before loading with product. The system would have then reached the set temperature and also cycled more than once. This ensures that there was no internal fault due to transport. If you load the unit earlier. Close monitoring is required for the first 24 hours of operation.



### **Basic Operation:**

1. The standard refrigeration cabinets with either drawer or doors are designed to operate with these closed.
2. Please ensure your staff simply open and remove product and then close the doors immediately
3. Please ensure that enough space is left in the cabinet to allow sufficient circulation of air. Do not overload unit.

### **Basic Maintenance:**

1. We require cleaning of the condenser (external radiator) at least once every 3 months with a dry brush and/or vacuum cleaner. Initially we recommend you clean this month to get an idea of the dust levels in your environment.
2. Every self contained refrigeration unit has a drain from the internal evaporator coil to a dissipater tray. The condensate water is then evaporated away. These drains require cleaning at regular intervals. The first indication of a blocked drain is water at the bottom of your cabinet.
3. The units needs to be fully emptied and cleaned out once every two weeks.

This Warranty is subject to the following terms and conditions:

### **Conditions:**

1. All refrigeration items must be installed correctly. Adequate ventilation must be supplied as per manufacturer specifications.
2. Subject to basic and regular service maintenance—Regular maintenance is required a minimum of every 6 months by a qualified technician. There is a record document at the back of the Instruction manual, for your convenience, to keep track of this information. If regular maintenance does not take place this may void warranty. The cost of this maintenance is not covered by Southern Hospitality.



## **1. Does not cover**

- a. Damage by misuse or abuse—Any fault or component failure caused by lack of maintenance will be charged to owner/operator of the equipment.
- b. Second hand equipment unless specified in writing by Southern Hospitality
- c. Glass, light bulbs, flour tubes or any other consumables.
- d. Damage to goods arising from circumstances beyond the manufacturers control and/or natural disaster; include but not limited to power surges, disruption to service.
- e. Faults due to customer design or specification.
- f. Modification of units

2. Any replacement or repaired goods will only be warranted for the remaining time of the warranty of the original purchase/invoice date.

3. Any repairs must be undertaken by an approved refrigeration engineer.

**Failure to comply** with these conditions will **void** the **warranty**.

All units must be installed as per the manufacturers specification and have **adequate ventilation** at all times.

