

Induction Counter-Top Series

Griddle-Line Single And Dual Models

Instructions For Installation And Use

 **CAUTION:** Read the instruction before using the machine.

Note: This device line is intended for professional use only.

models

INSTINCT Griddle 3
INSTINCT Griddle 3.5
INSTINCT Griddle 5
INSTINCT Griddle 7
INSTINCT Griddle 10

Translation of Original Instructions - English



This Manual can also be
found on www.inducs.com

READ THIS MANUAL

Warning

Read this manual thoroughly before installing, operating, or performing maintenance on the equipment. Failure to follow instructions in this manual can cause property damage, injury or death.

This manual must always be available for reference at the place of operation.

This manual is intended for kitchen consultants, cabinet designers, fabricators, installers, owners and operators of our appliances.

Owners, consultants, fabricators and designers:

In order for the appliance to function safely and normally, you must read and understand all specific and critical requirements (such as location, ventilation, clearance) when designing the location and/or the electrical cabinet for the appliance.

Installers, operators and staff:

For your safety and safety of the others, you must observe all safety instructions during installation, operation and maintenance of the equipment.

Should you require technical assistance, call your factory authorized service agent or distributor.

Always have your model and serial number available when you call.

Your Factory Authorized Service Company and Contact Information

Your Equipment Supplier and Contact Information

Model Number

Serial Number

Date of Installation

ABOUT THIS MANUAL

Throughout this manual, the induction appliance model indicated on the cover page is referred to as **appliance, induction appliance or equipment.**

A period (.) is used in this manual as the decimal separator.

Original measurements are in metrics. Measurements in imperial are provided for reference.

Not ALL models, options and accessories are available in all geographical regions. Please consult your equipment supplier for the availability of the specific products in your region.

INSPECT THE SHIPMENT

Thoroughly inspect the equipment upon delivery. Immediately report to the delivery carrier, any damage that occurred during transportation and request for a written inspection report from a claim inspector.

Keep all packages.

KEEP THE PACKING SLIP

The packing slip attached to the shipment contains detailed information on all components. Keep the packing slip for reference.

Safety Notices

DEFINITIONS

DANGER

Indicates a hazardous situation that, if not avoided, will result in death or serious injury. This applies to the most extreme situations.

Warning

Indicates a hazardous situation that, if not avoided, could result in death or serious injury.

Caution

Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

Notice

Indicates information considered important, and is used to address practices not related to physical injury. For example, messages relating to property damage.

NOTE: Indicates useful, extra information about the procedure you are performing.

SAFETY SYMBOLS AND WARNINGS ON THE APPLIANCE



This symbol alerts you to a hazardous situation that WILL or COULD cause serious bodily harm or death. Be alert and implement relevant safety precautions.



DANGER - HIGH VOLTAGE

This dangerous voltage warning symbol indicates a risk of electric shock and hazards from dangerous voltage.



Electromagnetic Field

This symbol warns against non-ionizing electromagnetic radiation.



Equipotential bonding

This symbol marks the terminal which has to be connected with the equipotential bonding system.



Warning



RISK OF FIRE OR ELECTRIC SHOCK! DO NOT OPEN!

To reduce the risk of fire or electric shock, do not remove or open cover. No user-serviceable parts inside.

Refer servicing to qualified personnel.



DANGER

Disconnect from supply circuit before opening.

CAUTION ATTENTION

DISCONNECT FROM SUPPLY CIRCUIT BEFORE OPENING
COUPER L'ALIMENTATION ELECTRIQUE AVANT D'OUVRIR
DESCONECTAR DEL CIRCUITO DE SUMINISTRO ANTES DE ABRIR

Αποσυνδέστε από τον καλωδιακό εξοπλισμό πριν ανοίξετε
إفصل الجهاز عن الدائرة الكهربائية قبل الفتح.

01648-5

DISCLAIMERS**⚠ DANGER**

Disregarding any safety instructions may cause harm to people, the surroundings, and the equipment. The manufacturer and/or authorized representative are not responsible for any damages or personal injury caused by failure to observe any safety instructions. Risks involved when disregarding safety instructions include, but not limiting to:

- Death or injury caused by electric shock.
- Burn injury caused by contacting hot cooking surface, cookware, or oil and grease.
- Damage to the equipment caused by using unsuitable cookware.

⚠ DANGER

Do not install or operate equipment and/or accessories that have been misused, abused, neglected, damaged, or altered from that of original manufactured specifications.

⚠ DANGER

Contact the manufacturer if you intend to make any changes on the equipment. For safety reasons, always use genuine parts and accessories approved by the manufacturer or authorized representative. Refer to the warranty documents for your equipment.

⚠ Warning

The single phase models have a power inlet intended to make the model universal. Using a cord that is not factory supplied can lead to several hazards if the wrong cord and plug attachment is installed and used. Example fire and burn hazard, risk of electric shock, risk or failure to function correctly

⚠ DANGER

Owners and operators are cautioned that maintenance and repairs must be performed by an authorized service agent using only genuine replacement parts. The manufacturer will have no obligation with respect to any product that has been improperly installed, adjusted, operated or not maintained in accordance with national and local codes and/or installation instructions provided with the product or any product that has its serial number defaced, obliterated or removed, and/or which has been modified or repaired using unauthorized parts or by unauthorized service agents.

⚠ DANGER

Improper installation, adjustment, alteration, service, or maintenance of this appliance or installation of a damaged appliance can result in DEATH, INJURY, EQUIPMENT DAMAGE, and void the warranty.

⚠ DANGER

All utility connections and fixtures must be maintained in accordance with local and national codes.

⚠ Warning

Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance. Never use flammable oil soaked cloths or combustible cleaning solutions for cleaning.

⚠ Warning

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision concerning use of the appliance by a person responsible for their safety. Do not allow children to play with this appliance.

⚠ Warning

This product contains chemical known to the State of California to cause cancer and/or birth defects or other reproductive harm. Operation, installation, and servicing of this product could expose you to airborne particles of glass-wool or ceramic fibers, crystalline silica, and/or carbon monoxide. Inhalation of airborne particles of glass-wool or ceramic fibers is known to the State of California to cause cancer. Inhalation of carbon monoxide is known to the State of California to cause birth defects or other reproductive harm.

⚠ Warning

Authorized Service Representatives are obligated to follow industry standard safety procedures, including, but not limited to, local/national regulations for disconnection / lock out / tag out procedures for all utilities including electric, gas, water and steam.


Notice

This appliance is not approved or authorized for home or residential use, but is intended for commercial applications only. The manufacturer and/or authorized representative will not provide service, warranty, maintenance or support of any kind other than in commercial applications.

Notice

Routine adjustments and maintenance procedures outlined in this manual are not covered by the warranty.

NOTE: Proper installation, care and maintenance are essential for maximum performance and trouble-free operation of your equipment. Visit our website for manual updates, translations, or contact information for service agents in your area.

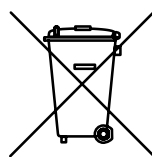

This marking shown on the product indicates that the product should not be disposed as household waste or regular commercial waste. Instead it shall be

handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed correctly, you will help prevent potential harm to the environment or human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information regarding recycling of the product, please contact your local city office or your waste disposal service.

⚠ DANGER

Induction appliances, sent for disposal, can be brought back into operation and their use must be avoided.

NOTE: The appliance is built with common electrical, electromechanical and electronic parts. No batteries are used.

NOTE: The owner and operator are responsible for the proper and safe disposal of the appliance.

Wichtig

Additional Safety Notices are stated in the relevant sections throughout the manual.

CORRECT DISPOSAL OF THIS PRODUCT

Table of Contents

Safety Notices

Definitions	4
Safety symbols and Warnings on the Appliance	4
Disclaimers	5
Correct Disposal of This Product.....	6

Table of Contents

Section 1

General Information

Description of Product.....	10
Application	10
Compliances	10
Serial Plate Location	11
Model Number	11
Serial Number.....	11

Section 2

Installation

Installation Safety—Disclaimer.....	14
Installation Safety—Clearance and Ventilation	14
Installation Safety—Electrical.....	15
Personal Protection	16
Specifications	17
Dimensions: INSTINCT Griddle 3, INSTINCT Griddle 3.5, INSTINCT Griddle 5	17
Dimensions: INSTINCT Griddle 7, INSTINCT Griddle 10.....	18
Installation Clearance	19
Electrical Specifications	19
Electrical Cables.....	19
Operating Conditions.....	20
Weights.....	20
Installation Instructions	21
Location of the Induction Appliance	21
Ventilation Requirements	21
Leveling the appliance	21
Adjusting Legs.....	22
Commissioning	22
Function Test	22

Section 3 Operation

Operation Safety—Disclaimer.....	23
Operation Safety—Personal Protection.....	23
Important Rules—Operation and Maintenance.....	25
Display and Control Quick Reference	26
Control	27
Turn unit on.....	27
LED Ring	27
Selecting Temperature	27
Setting the Timer.....	27
Turning off	27
Decommissioning	28
Considerations	29
When Appliance Is Idle	29
Short Heat-Up Time.....	29

Section 4 Maintenance

Maintenance Safety—Disclaimer.....	30
Dangerous Electrical Voltage.....	30
Maintenance Safety—Cleaning.....	31
Personal Protection	32
Daily Cleaning and Maintenance	33
Stainless Steel case	33
Grease drawer.....	33
Cleaning the Griddle Plate.....	33
Weekly Cleaning and Maintenance	34
Air Intake Filter	34
Yearly Maintenance.....	34

Section 5 Troubleshooting

Dangerous Electrical Voltage	35
Common Problems.....	35
Symptoms	35
Dangers Avoidance in case of accidents or malfunctions.....	36
Troubleshooting Without Error Code	37
Troubleshooting — Error Code	38

Section 1

General Information

Description of Product

Built with a robust construction, our induction appliances are compact and powerful with the revolutionary RTCSmp® Technology (Realtime Temperature Control System).

The RTCSmp® Technology monitors continuously in realtime, the energy supply, temperature of the cook zone and the state of the components such as the induction coil. This monitoring system ensures the most efficient energy transfer, as well as maximizes safety:

- When a malfunction occurs, the integrated fault diagnostic system reports the malfunction.

Application

The RTCSmp® induction appliances are designed as compact equipment for use on the surface of a counter or table.

The patented¹ induction RTCSmp® Griddles are engineered for cooking a large variety of meals.

Many applications are possible because:

- Instant energy transmission from induction coil to griddle plate surface allows for fast startup time.
- Heat distribution is even from corner to corner, across the entire cooking surface.
- The cooking surface is controlled and monitored by multiple sensors. Instantaneous temperature recovery is feasible.
- The griddle plate is coated with a polished HP-CR-INOX layer, which is resistant to abrasion, corrosion, and heat. This feature strengthens the griddle plate and minimizes cleaning time in between meal preparations.

¹ Europatent EP 0858722, Swiss Patent 695817, US Patent 7183525 B2

Compliances



400V and 208V-230V models comply with the latest European Norms:

EN 55014-1	EN 55014-2
EN 60529	EN 62233 (EMC/EMV)
EN 60335-1	EN 60335-2-36
EN 60335-2-38	EN 61000-3-11
EN 61000-3-12	

208V and 208V-240V models comply with the latest North American Norms:

UL 197
cULus Listed to CSA 22.2 109-M1981
UL 746C
FCC (CFR Title 47 Part 8 and Part 15B)
ICES-001 (Issue 4)
ICES-003 (Issue 6)
UL Sanitation to NSF 4

This device complies with Part 15 and 18 of the FCC Rules. Operation is subject to the following conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This ISM device complies with Canadian ICES-001.

Cet appareil ISM est conforme à la norme NMB-001 du Canada.

UL File No: E502348, E505967

Serial Plate Location

The serial plate is located on the bottom panel of the unit. It specifies the model number, serial number, and electrical specifications of the appliance.

Model Number

The model number is located on the serial plate. This manual covers only the models specified on the front cover of this manual.

READING THE MODEL NUMBER

INSTINCT Griddle	Griddle
3 / 3.5 / 5 / 7 / 10	Total power in kW NOTE: 10 kW indicates dual griddle

Serial Number

Serial number is located on the serial plate.

Section 2

Installation

INSTALLATION SAFETY—DISCLAIMER

DANGER

Installation must be carried out by registered installation contractors only.

The contractors are responsible for interpreting all instructions correctly and performing the installation in compliance with all applicable national and local regulations.

The warning signs and serial plates on the equipment must strictly be followed.

Warning

This equipment is intended for indoor use only. Do not install or operate this equipment in outdoor areas.

Warning

To avoid instability, the installation area must be capable of supporting the combined weight of the equipment and food product. The equipment must be level side to side and front to back.

Caution

Consultants, fabricators and designers must consult their counter-top suppliers when designing an appropriate support structure and clearance for the counter-top and the installation.

Notice

Induction equipment that is not installed correctly will have warranty voided.

INSTALLATION SAFETY—CLEARANCE AND VENTILATION

DANGER

Risk of Fire or Shock or Equipment Failure

All minimum clearances must be maintained. Air intake vents and exhaust vents must not be blocked or be restricted by the installation.

Caution

This equipment must only be operated under an approved ventilation system in accordance with all applicable national and local regulations. Exceptions may apply.

Notice

The maximum ambient temperature for the induction appliance to operate must not exceed 40°C [104°F].

Failure to provide adequate ventilation will cause the appliance to overheat, to reduce power, or to shutdown.

NOTE: Always maintain enough space between and around the equipment for maintenance and service.

INSTALLATION SAFETY—ELECTRICAL**⚠ DANGER**

All electrical connections must be carried out by a certified electrical contractor, who is responsible for the correct rating and installation of the appliance. The contractor has to comply with all legal safety regulations and all applicable national and local electrical codes.

⚠ Warning

Markings and warning labels mounted directly on the equipment must be observed at all times and kept in a fully legible condition.

⚠ Warning

This equipment must be positioned so that the plug is accessible unless other means for disconnection from the power supply, such as circuit breaker or disconnect switch, is provided.

⚠ Warning

CE Induction Appliance only: If ground fault current protective switches are used, they must be provided with selective activation and designed for a minimum fault current of 30mA, Type B or B+.

Notice

Ensure the supply voltage and the line current match the specifications given on the serial plate affixed to the appliance. Wrong voltage will damage the appliance. A stable power supply must be provided.

Notice

Always refer to the serial plate on the appliance to verify the electrical data. When the data listed on the serial plate is different than that listed in this manual, contact the manufacturer or the authorized representative.

Notice

All cables must be routed, protected and tension free.

PERSONAL PROTECTION**⚠ DANGER**

All utilities (gas, electric, water and steam) must be OFF to all equipment and locked out of operation according to national/regional, as well as company approved practices during installation, maintenance and servicing. Always allow appliance to cool.

⚠ DANGER

Use appropriate safety equipment during installation, maintenance and servicing.

⚠ DANGER

Never stand, sit, or lean on the equipment! They are not designed to hold the weight of an adult, and may collapse or tip if misused in this manner.

⚠ DANGER

To avoid cardiac pacemaker malfunction, consult your physician or pacemaker manufacture about effects of electromagnetic field on your pacemaker.

⚠ DANGER

Replace defective power cable immediately by an authorized service agency.

⚠ Warning

Markings and warning labels mounted directly on the equipment must be observed at all times and kept in a fully legible condition.

⚠ Warning

Risk of burns from high temperatures. You may get burnt if you touch any of the parts during operation. Surfaces close to the cooking area including side panels may get hot enough to burn skin. Use extreme caution to avoid coming in contact with hot surfaces or hot grease. Wear personal protective equipment.


⚠ Caution

Use caution when handling metal surface edges of all equipment.

Specifications

DIMENSIONS: INSTINCT GRIDDLE 3, INSTINCT GRIDDLE 3.5, INSTINCT GRIDDLE 5


Measurements in millimeters and [inch].

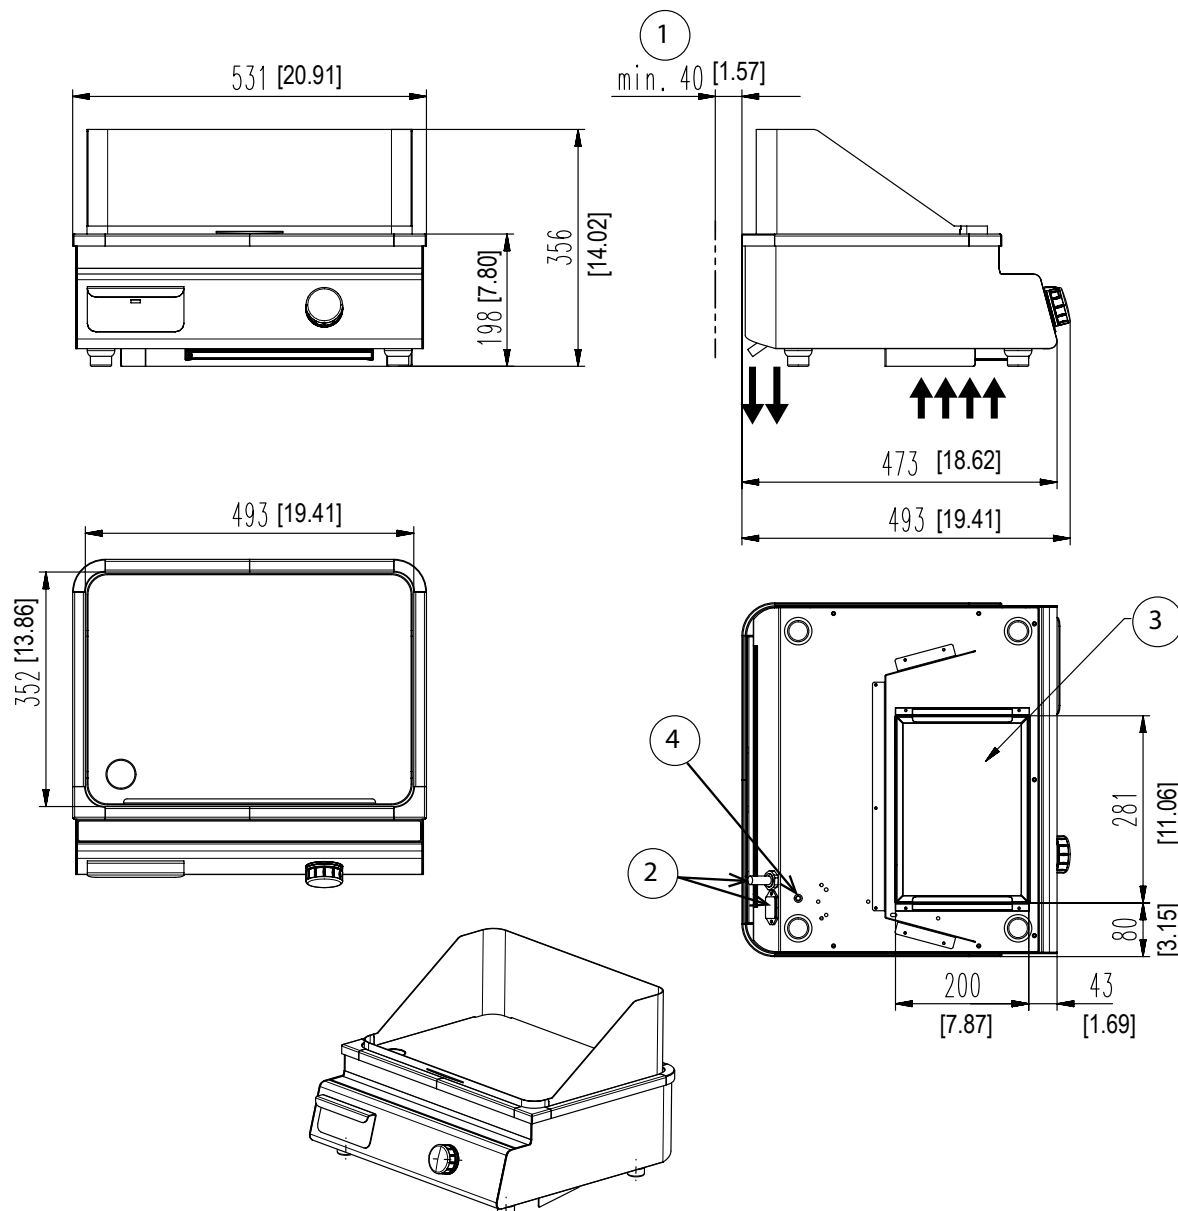

➔	Indicates the direction of airflow
1	Distance to wall or other obstruction, minimum = 40mm [1.57"]
2	Power Cable Connection
3	Air intake filter
4	Equipotential bonding point  (EN60335)

DIMENSIONS: INSTINCT GRIDDLE 7, INSTINCT GRIDDLE 10

Measurements in millimeters and [inch].

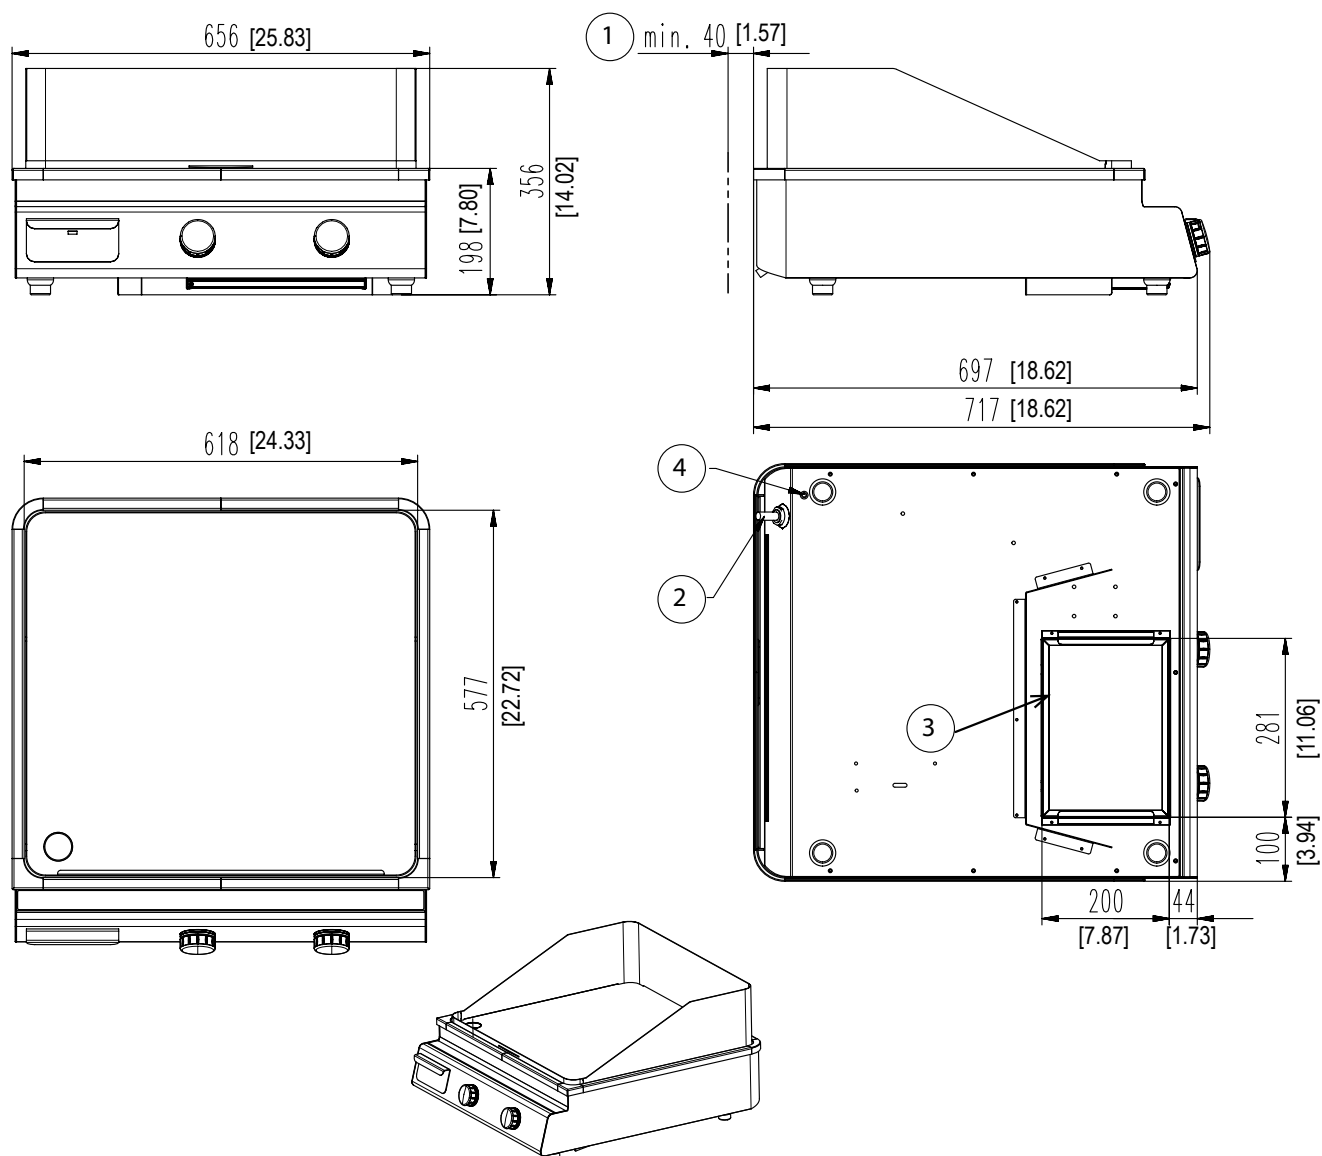

➔	Indicates the direction of airflow
1	Distance to wall or other obstruction, minimum = 40mm [1.57"]
2	Power Cable Connection
3	Air intake filter
4	Equipotential bonding point  (EN60335)


INSTALLATION CLEARANCE

Notice

The orientation of each appliance in a parallel configuration will affect the ventilation requirements. Ensure the final installation meets all operating and ventilation requirements.

Refer to example below:

→	Indicates the direction of airflow
a	Distance to wall or other obstruction, minimum = 40mm [1.57"]
y	A gap between two countertop units is not required.

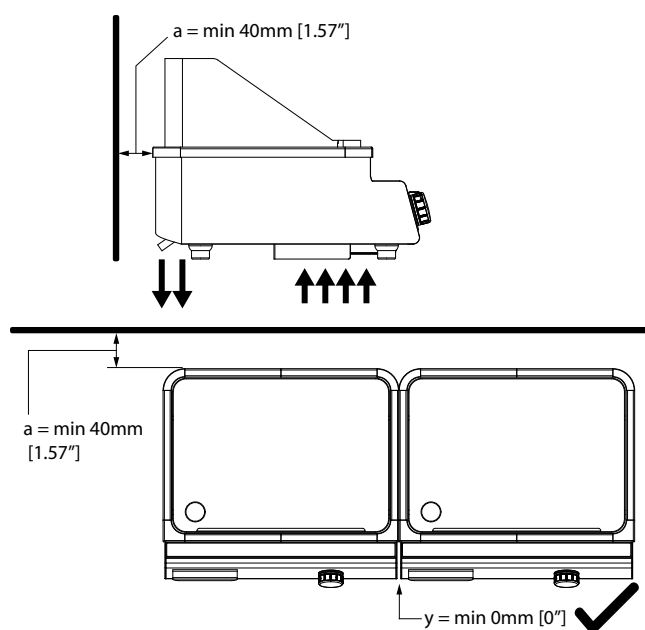

ELECTRICAL SPECIFICATIONS

Model	Power / Current	Voltage / Phases	Plug
INSTINCT Griddle 3	3000W / 13A	230V / 1Φ	TYP G
INSTINCT Griddle 3.5	3500W / 16A	230V / 1Φ	EU1-16P
	3500W / 17A	208V / 1Φ 208V / 2Φ	NEMA 6-20P
INSTINCT Griddle 5	5000W / 8A	400V / 3Φ	EU 5-Pole
	5000W / 14A	208V / 3Φ	NEMA L15-20P
INSTINCT Griddle 7	7000W / 20A	208V / 3Φ	NEMA 15-30P
INSTINCT Griddle 10	10000W / 16A	400V / 3Φ	EU 5-Pole
	10000W / 28A	208V / 3Φ	NEMA 15-50P

ELECTRICAL CABLES

Power supply cable and plug are included, 1.8-meter [6-foot] long.

OPERATING CONDITIONS

For the appliance to function properly, the following conditions must be maintained.

Maximum Tolerance of the Nominal Supply Voltage	+6 /-10 %
Network Impedance (Zmax.)	0.25Ω
Supply frequency	50/60 Hz
Ingress Protection class	IP X3
Maximum Ambient Temperature	In Storage, -20°C to +70°C [-4°F to +158°F]
	In Operation, +5°C to +40°C [+41°F to +104°F]
Maximum Relative Air Humidity	In Storage, 10% to 90%
	In Operation, 30% to 90%
Noise level	<45dB

WEIGHTS

Model	Net Weight	
	kg	lb
INSTINCT Griddle 3	28	62
INSTINCT Griddle 3.5	28	62
INSTINCT Griddle 5	30	67
INSTINCT Griddle 7	48	106
INSTINCT Griddle 10	48	106

Installation Instructions

LOCATION OF THE INDUCTION APPLIANCE

Caution

Do not position the air intake vent near steam or heat exhaust of another appliance.

- The induction appliance must be installed on an even, flat, non-combustible surface.
- The surface must be able to withstand a load of 80kg (176.4lb) per appliance that is listed in this manual.
- Ensure the induction appliance is stable and will not slide or fall down.
- The induction appliance must not be installed or placed near or on a hot surface.
- The induction appliance must be level.
- Similar to other electronic equipment, induction equipment is sensitive to moisture and high heat. Protect the induction appliance from heat, steam and grease generated by other equipment, such as oven, deep fryer, pasta cooker, steamers, and water bath.
- The control switches on the front panel must not be blocked or obstructed.
- Keep the induction appliance away from combustible materials, vapors or liquids.

VENTILATION REQUIREMENTS






Read and understand all installation safety instructions regarding Clearance and Ventilation at the beginning of this chapter.

- Ensure the induction appliance does not take in hot ambient air or steam from another appliance, especially when the appliance is installed next to heat generating equipment such as fryers or ovens.
- See also Installation Clearance.

LEVELING THE APPLIANCE


To help draining grease down into the grease drawer, adjust the feet to tilt the griddle with a slight angle (**less than 1 degree**).

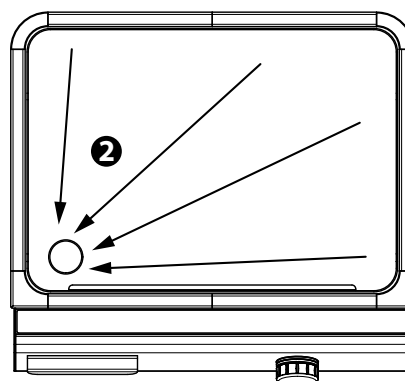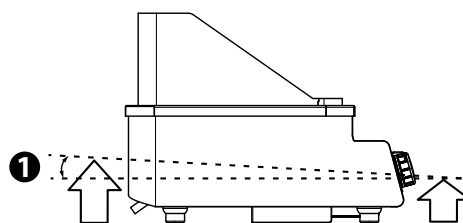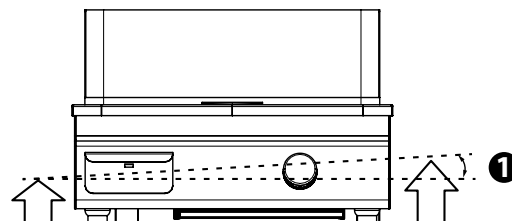

1	The tilt must be less than 1 degree.
2	Direction of grease flow

ADJUSTING LEGS

Adjust the height of the leg by turning the bottom part as shown:

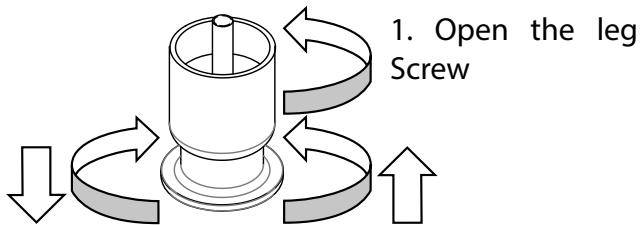

2. Adjust the height of the leg by turning the leg by turning

COMMISSIONING



Read and understand all installation safety instructions regarding Electrical and Personal Protection.

1. Remove all objects from the griddle plate.
2. Connect the appliance to power supply.
3. Test different functions of the appliance.

Function Test



- Read and understand all installation safety instructions regarding Personal Protection.
- Observe also ALL operation safety requirements in section 3 Operation.

Testing procedure:

1. Follow operational instructions in section 3 to test:
 - Heat up to selected temperature.
 - Timer Function
 - Operation of knob
 - LED light is functioning.
- NOTE: The LED ring illuminates continuously when the set temperature has been accepted.
2. Follow instructions in section 3 to set temperature display to °C or °F.
 3. Turn the appliance off. When the unit is switched off, a  appears on the display.

If the appliance does not function, refer to section 5 Troubleshooting.

Section 3 Operation

OPERATION SAFETY—DISCLAIMER

DANGER

The on-site supervisor is responsible to train operators for operating, maintaining and ensuring that operators are made aware of the inherent dangers of operating this equipment.

DANGER

Risk of fire/shock/equipment failure. **All minimum clearances must be maintained. Do not obstruct vents or openings.**

Warning

This equipment is intended for indoor use only. Do not install or operate this equipment in outdoor areas.

Notice

The reliability of the appliance can only be guaranteed when it is used properly. The appliance must always be operated within the limits and/or the operating conditions provided in this manual.

Notice

Avoid dropping any hard objects onto the equipment. Damages to the heating surface will shorten the life cycle of the equipment and incur high service costs.

Notice—Induction Griddles

NEVER heat any cooking pan on the griddle plate. Heating cooking pan will damage these equipment. Heat only food products on the griddle plate.

OPERATION SAFETY—PERSONAL PROTECTION

Notice

Induction appliances are more powerful, heat up quicker, and cook food faster than conventional cooking equipment. Your induction appliance will require different use and care than other conventional equipment.

Do not operate the equipment without reading this manual and understanding all safety requirements.

DANGER

If any part of the appliance is cracked or broken, **turn Off directly the appliance and Immediately disconnect the appliance from the supply.** Do not touch any parts inside the appliance.

Disconnect electric power at the main power disconnect for all equipment being serviced.

Failure to disconnect the power at the main power supply disconnect could result in serious injury or death. The power switch DOES NOT disconnect incoming power.

Contact an authorized service agency for assistance.

DANGER

Do not operate any appliance with a damaged or pinched cord or a damaged plug. All repairs must be performed by a qualified service company.

DANGER

Keep power cord AWAY from HEATED surfaces. DO NOT immerse power cord or plug in water. DO NOT let power cord hang over edge of table or counter.

⚠ DANGER

To avoid cardiac pacemaker malfunction, consult your physician or pacemaker manufacturer about effects of electromagnetic field on your pacemaker.

⚠ DANGER

Never stand, sit, or lean on the equipment! They are not designed to hold the weight of an adult, and may collapse or tip if misused in this manner.

⚠ Warning

Risk of burns from high temperatures. You may get burnt if you touch any of the parts during operation. Surfaces close to the cooking area including side panels may get hot enough to burn skin. Use extreme caution to avoid coming in contact with hot surfaces or hot grease. Wear personal protective equipment.

⚠ Warning

During operation, it is possible that the floor around the unit become slippery. Wear suitable footwear and clean the floor if necessary.

⚠ Caution**Short Cook Time**

Induction appliances cook food faster than conventional cooking equipment. To avoid overheating and burning, check the cooking process frequently. Never leave the appliance unattended during operation.

⚠ Caution

Metallic objects are heated up very quickly when placed on the induction cook zone during operation. To avoid injury,

DO NOT place any objects such as closed cans, aluminum objects (aluminum foils), cutlery, jewelry, or watches on the appliance.

DO NOT place any object such as paper, cardboard, or cloth on the cooking surface, because this creates a fire hazard.

DO NOT place credit cards, phone cards, tapes, or any objects that are sensitive to magnetism on the appliance.

DO NOT use the appliance for storage.

DO NOT place any paper products, cooking utensils, cutlery, plastic vessels or food on the appliance.

Notice

Do not use the cooktop for food preparation such as cutting and chopping.


Cooking with Induction Griddles**⚠ Caution****Induction Griddles**

A suitable grease-collecting means must be in place before operating appliance.


Important Rules—Operation and Maintenance

Follow these simple rules to ensure reliable and repeatable performance of your induction equipment:


- 1 Keep kitchen temperature below 40°C [104°F].**

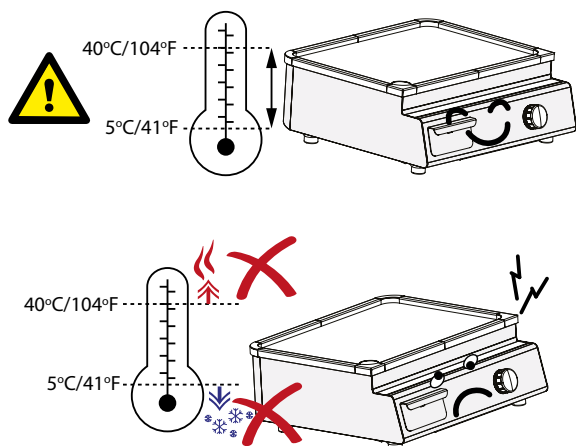


- 3 Clean the intake filter at least once a week or as often as required.**

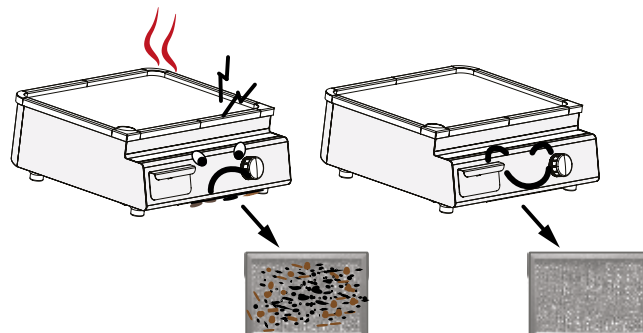

- 2 Never place your induction equipment next to any steam generating or heat generating equipment.**

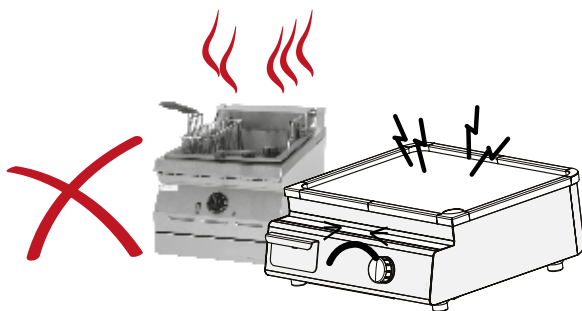

- 4 Do not use pans on the griddle.**

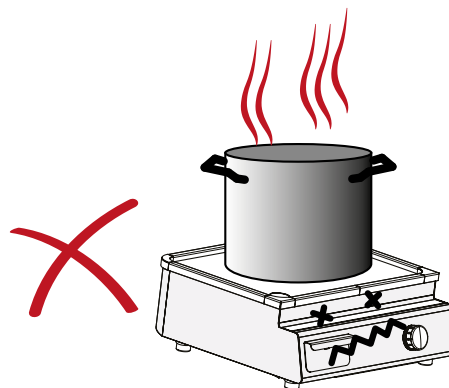

Display and Control Quick Reference

The diagram illustrates the control panel of a unit, divided into several functional sections:

- Temperature, °C or °F:**
 - To set °C or °F, press down knob while connecting unit to power outlet.
 - Turn knob to select P2 option on display.
 - Click knob 1 time (1x) to confirm.
 - Turn knob to select °C or °F and click knob 1x to confirm.
 - To return to normal mode, click and press down knob until other icons is shown on display.
- Timer, Minutes:**
 - After selecting temperature, double click knob to switch to Timer Mode.
 - Turn knob to select time in minutes.
 - Click knob 1 time (1x) to confirm and start count-down.
- Temperature:**
 - Turn knob to select temperature.
- Control Knob:**
 - TURN**
 - Turn knob to select temperature / time / option.
 - CLICK**
 - 1 time (1x) to confirm selection.
 - double (2x) to switch to Timer function
- Turn Unit ON:**
 - Click knob 1 time
- Turn Unit OFF:**
 - Turn knob to the lowest power or lowest temperature. When LED ring is flashing, turn knob slightly to turn unit off.
- Error Messages:**
 - Error: Overheated Grill Plate!** (Icon: Grill plate with wavy lines)
 - Error: Overheated Unit!** (Icon: Fan with wavy lines)
 - Error: Call for Service. Error Code on Display.** (Icon: Wrench and screwdriver)
- LED:**
 - Lights up during power output.
 - Flashes when waiting for operator input.

Control

TURN UNIT ON

Click knob and turn to select temperature.

LED RING

- The LED ring flashes if operator input is needed.
- The LED ring lights up continuously during cooking.

SELECTING TEMPERATURE

1. Turn knob until the desired temperature is shown on the display.
2. Leave the knob for approximate 5 seconds, the display will show alternately the actual detected temperature and set temperature.

SETTING THE TIMER

1. After setting temperature, double click the knob to switch to Timer Mode.
2. Turn knob to set the timer from minimum 1 minute to maximum 240 minutes. The LED ring will flash.
3. Click knob 1 time (1x) to confirm and start the count-down.
4. Note the display will show alternately the temperature and the count-down.
5. After the set time is elapsed, the appliance will sound a beeping signal and the unit will automatically shut down if the operator takes no action.

TURNING OFF

Turn knob to go to the lowest temperature.

When LED ring is flashing, turn knob slightly further to turn off the appliance.

When the unit is switched off, a  appears on the display.



Additional Settings

Additional settings are available to reduce power level, and to set display to °C or °F.

To activate the additional settings:

1. Press down knob while connecting unit to power outlet.
2. Then turn knob to select setting P1 or P2:
 - P1 = Reduce nominal max power from 100% to 25%
 - P2 = Change temperature between °C and °F
 - P3 = Shows the actual Firmware number.
 - P4 = Enable / Disable buzzer (timer function)
3. Click knob 1 time (1x) to confirm selection.
4. In P1, turn knob to select power.
In P2, turn knob to select °C or °F.
In P4, turn knob to select "on" or "off"
5. Click knob 1 time (1x) to confirm selection.
6. To leave the special setting function, keep pressing down the knob for approximately 5 seconds.

Decommissioning

Procedure if the device is not needed for a long time.

1. Switch off the device on the knob.
(See Section 3 Turning Off)
2. Disconnect the device from the mains.

DANGER

If the plug is not safely accessible, the device must be switched off at the main circuit breaker.

Grease Drawer

- Empty out the grease drawer as often as necessary.
- Before operating the appliance, ensure the grease drawer is placed correctly and securely under the grease chute such that the drawer will not slide out or fall.

 Caution

Risk of burn from hot equipment, hot grease and steam. Wear personal protective equipment.

Short Heat-Up Time

To heat up from 20°C to 200°C (68°F to 392°F), a single cook-zone griddle will take:

- INSTINCT Griddle 3.5, approximately 4 ½ minutes
- INSTINCT Griddle 5, approximately 3 minutes
- INSTINCT Griddle 10, approximately 3 minutes

Considerations

- **Always use a bit of oil on the griddle plate before putting any food on.**

- **Cooking Food from Frozen**

If you cook food from frozen regularly, do not put the frozen food every time on the same position. Otherwise, the plate could deform locally over time.

- **Using Proper Cooking Utensils**

Use only the spatula provided to turn over food products on the griddle plate. Using any sharp-edged objects such as knife or fork can damage the griddle surface.

- **Recovering from Temperature Loss**

Temperature loss occurs when cold food is put on the griddle plate. The RTCSmp technology can immediately sense the temperature drop and correct any temperature loss.

When Appliance Is Idle

BEST PRACTICE:

When the induction appliance is not in use, turn off the appliance.

Section 4

Maintenance

MAINTENANCE SAFETY—DISCLAIMER

DANGER

It is the responsibility of the equipment owner to perform a Personal Protective Equipment Hazard Assessment to ensure adequate protection during maintenance procedures.

Warning

A good maintenance of the appliance requires regular cleaning, care and servicing. The site-supervisor and the operator must ensure all components relevant to safety are in perfect working order at all times.

NOTE: Cleaning tools and supplies are not provided.

DANGEROUS ELECTRICAL VOLTAGE

DANGER

Do not open the appliance. Maintenance and servicing work other than cleaning as described in this manual must be done by an authorized service personnel.

DANGER

If any part of the appliance is cracked or broken, **turn Off directly the appliance and Immediately disconnect the appliance from the supply.** Do not touch any parts inside the appliance.

Disconnect electric power at the main power disconnect for all equipment being serviced.

Failure to disconnect the power at the main power supply disconnect could result in serious injury or death. The knob DOES NOT disconnect incoming power.

Contact an authorized service agency for assistance.

MAINTENANCE SAFETY—CLEANING

Warning

Never use a high-pressure water jet for cleaning or hose down or flood interior or exterior of the equipment with water. Ensure that no liquid can enter into the equipment.

Warning

Allow heated equipment / glass surface to cool down before attempting to clean, service or move.

Warning

Use only a damp cloth to clean the knob or power cord. Disconnect power before cleaning the rotary knob or power cord. Make sure the knob and power cord are dry before re-connecting the unit.

Caution

Do not use caustic cleaners on any part of the equipment. Use mild, non abrasive soaps or detergents, applied with a sponge or soft cloth.

Caution

Ensure to remove all residues of cleaning agents from the cooking surfaces. Use a clean moist cloth to wipe off any such surfaces.

Caution

Using commercial cleaning fluids or chemicals: Read the directions for use and precautionary statements before use. Pay attention to the concentration of cleaner and the length of time the cleaner remains on the food-contact surfaces or equipment surfaces.

Notice

Inspect and Clean Fresh Air Intake Filter

We strongly recommend using air intake filters in all installations to protect the equipment from grease particles. A dirty, blocked air intake filter blocks the air vent and can cause damages to the electronic components. Inspect, clean or replace the air intake filters at least once a week or as often as necessary.

Warning

Inspect Silicone Seal

When the silicone seal is broken, water penetration could cause the appliance to fail, and any malfunction could cause personal harm.

PERSONAL PROTECTION**⚠ DANGER**

All utilities (gas, electric, water and steam) must be OFF to all equipment and locked out of operation according to national/regional, as well as company approved practices during installation, maintenance and servicing. Always allow appliance to cool.

⚠ DANGER

Use appropriate safety equipment during installation, maintenance and servicing.

⚠ DANGER

Never stand, sit, or lean on the equipment! They are not designed to hold the weight of an adult, and may collapse or tip if misused in this manner.

⚠ DANGER

To avoid cardiac pacemaker malfunction, consult your physician or pacemaker manufacture about effects of electromagnetic field on your pacemaker.

⚠ DANGER

Replace defective power cable immediately by an authorized service agency.

⚠ Warning

Markings and warning labels mounted directly on the equipment must be observed at all times and kept in a fully legible condition.

⚠ Warning

Risk of burns from high temperatures. You may get burnt if you touch any of the parts during operation. Surfaces close to the cooking area including side panels may get hot enough to burn skin. Use extreme caution to avoid coming in contact with hot surfaces or hot grease. Wear personal protective equipment.

⚠ Warning

During operation, it is possible that the floor around the unit become slippery. Wear suitable footwear and clean the floor if necessary.

⚠ Caution

Use caution when handling metal edges of all equipment.

Daily Cleaning and Maintenance

STAINLESS STEEL CASE

1. For any appliance with stainless steel case or stainless steel flange, clean the stainless steel surface using a soft cloth with a mild detergent and/or a food-safe liquid cleaner designed to clean stainless steel.
2. Wipe dry with a soft clean cloth.

GREASE DRAWER

- Empty out the grease drawer as often as necessary.

 Caution

Risk of burn from hot equipment, hot grease and steam. Wear personal protective equipment.

 Caution

A grease drawer must be in place before operating appliance.

CLEANING THE GRIDDLE PLATE

 Caution

Risk of burn from hot equipment, hot grease and steam. Wear personal protective equipment.

Notice

DO NOT USE strong detergents and solvents such as Ketone, Ester, and alkaline detergents. Depending on the concentration, reaction time and temperature, these chemicals could damage the special coating on the griddle plate.

DO NOT USE steel wool, tough scratching sponges, or knives on the grill plate. Use the cleaning pad provided with the equipment.

DO NOT USE ice cubes because that can cause deformation of the griddle plate.


To clean the griddle plate:

1. Set temperature to 60°C or 140°F.
2. Pour some water onto the plate and let the hot water dissolve the soiling.
3. Use non-abrasive scrubbing pads to scrape the residues into the grease drawer. To avoid burn injuries, scrub and scrape with a spatula on a non-abrasive scrubbing pad.


Weekly Cleaning and Maintenance

AIR INTAKE FILTER


1. The air intake filter is located on the bottom of the appliance. To remove, slid out the filter from the holder.

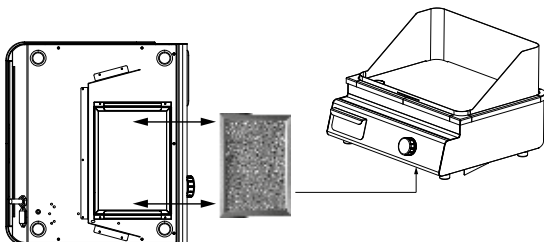

2. The filter is dishwasher-safe.

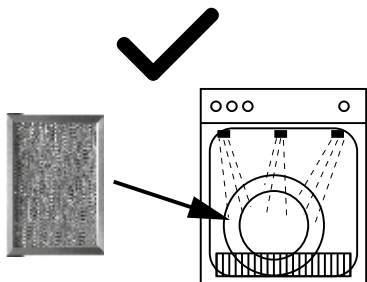

3. The filter must be DRY before you put it back into the holder.

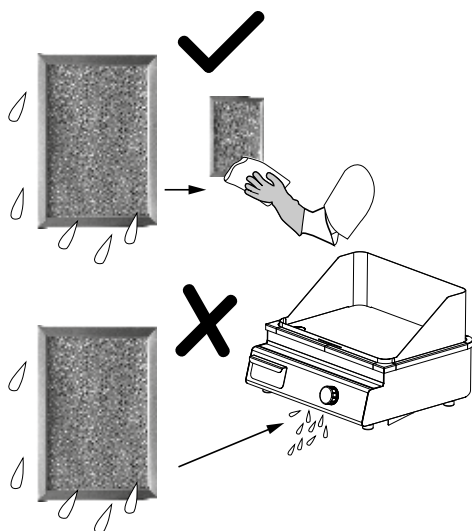

In case of insufficient cleaning of the device, the warranty expires.

Yearly Maintenance

Best Practice: Have the induction appliance examined once a year by an authorized technician.

Section 5

Troubleshooting

Dangerous Electrical Voltage

DANGER

If any part of the appliance is cracked or broken, **turn Off directly the appliance and Immediately Turn Off the appliance.** Only if it is possible and safe, disconnect the equipment from main power supply. Do not touch any parts inside the appliance.

Disconnect electric power at the main power disconnect for all equipment being serviced.

Failure to disconnect the power at the main power supply disconnect could result in serious injury or death. The power switch DOES NOT disconnect incoming power.

Contact an authorized service agency for assistance.

DANGER

Do not open the appliance. Maintenance and servicing work other than cleaning as described in this manual must be done by an authorized service personnel.

Warning

Markings and warning labels mounted directly on the equipment must be observed at all times and kept in a fully legible condition.

NOTE: If a problem arises during operation of your induction appliance, follow the Troubleshooting Charts before calling service. Routine adjustments and maintenance procedures are not covered by the warranty.

Common Problems

One or more of the following conditions may affect the function or cause the induction equipment to fail:

- High ambient temperature.
- Inadequate ventilation causing hot air to re-enter through the air intake slots.
- Dirty air intake filter.

Symptoms

- When a malfunction occurs, the appliance may be in one of the following states:
 - The appliance switches off immediately.
 - The appliance continues to operate in a power reduction mode.
 - The appliance continues to operate normally.
- NOTE:

The cooling fan starts when the ambient temperature in the control area exceeds 55°C [130°F].

At heat sink temperature higher than 70°C [160°F], the controller automatically reduces power to keep the appliance in normal operating conditions.

Dangers Avoidance in case of accidents or malfunctions

To avoid hazards in the event of a malfunction or accident related to the device, proceed as follows.

Disconnect the power supply from the circuit breaker provided for the device.

Disconnect the mains plug of the affected device to prevent it from being switched on again.

⚠ DANGER

If the plug is not safely accessible, the device must be switched off at the main circuit breaker.

Troubleshooting Without Error Code

Symptom	Possible Cause	Action
Griddle not heating up. Digital display is OFF (dark).	No power supply.	Check incoming power supply (Example, power cable plugged into the wall socket). Check kitchen main fuse box.
	Unit is turned off.	Turn control knob to an ON-position.
	Defective equipment	Only if possible and safe, disconnect the appliance from the power supply. (1) Contact an authorized service agency.
Griddle not heating up. "Service" symbol is ON.	Defective Unit	Only if possible and safe, disconnect the appliance from the power supply. (1) Contact an authorized service agency.
Poor heating, LED ring is ON	Air-cooling system is obstructed.	Verify that air vents are not obstructed. Ensure the fresh air filter is clean.
	Ambient temperature is too high. The cooling system is not able to keep the appliance in normal operating conditions.	Verify that no hot air is taken in by the fan. Reduce the ambient temperature. The intake air temperature must be lower than 40°C [104°F].
	One phase is missing (for equipment with three phase supply only).	Check incoming power supply (Example, power cable plugged into the wall socket). Check kitchen main fuse box.
	Reduced Power adj.	Check if the additional Setting "P1" is correct.
Appliance does not react to control knob positions	Defective equipment	Only if possible and safe, disconnect the appliance from the power supply. (1) Contact an authorized service agency.
	Defective control knob.	Only if possible and safe, disconnect the appliance from the power supply. (1) Contact an authorized service agency.
	Air-cooling system is obstructed. Internal fan is dirty.	Verify that air vents are not obstructed. Ensure the fresh air filter is clean. Contact an authorized service agency.
Overheated unit symbol is ON, fan is working	Defective fan or fan control.	Only if possible and safe, disconnect the appliance from the power supply. (1) Contact an authorized service agency.
Overheated unit symbol is ON	Overheated induction coil; cooking area is too hot.	Switch the appliance off. Wait until the appliance has cooled down before turning it ON again.

- (1) ** DANGER** If the plug is not safely accessible, the device must be switched off at the main circuit breaker.

Troubleshooting — Error Code

Error Code (Display)	Problem	Action
E01	Normal Operation. Internal wiring/coil connection malfunction. (2)	Normal Operation. Contact an authorized service agency.
E02	Coil overcurrent. (2)	Contact an authorized service agency.
E03 + 	Air-cooling system obstructed. Fan malfunction. Internal heat sink overheated. (2)	Let appliance cool down. Verify that air vents are not obstructed. Check and clean air filter. Contact an authorized service agency.
E04 + 	Overheated cook zone. Sensor failure.	Let appliance cool down. Verify that air vents are not obstructed. Check and clean air filter. Contact an authorized service agency.
E41, E42, E43, E44, E45, E46	Overheated or defective sensor. (2) NOTE: Errors E41 to E46, griddles may continue to operate.	
E06, E30 + 	Ambient temperature too high (the cooling system is not able to keep the induction appliance in normal operating conditions). Internal component overheated. (2)	Let appliance cool down. Verify that air vents are not obstructed. Check and clean air filter. Verified that no hot air is taken in by the fan. Reduce the ambient temperature. The intake air temperature must be lower than 40°C [104°F]. Contact an authorized service agency.
E29	Generator component failure. Problem with control wiring.	Contact an authorized service agency.
E47	Warning from overheated griddle plate sensor or coil connection failed. (2) NOTE: E47 on griddles indicates that griddle plate is too hot.	Let appliance cool down. Contact an authorized service agency.
E48	Internal reference voltage out of range.	Contact an authorized service agency.
E21 + 	Sensor error from heat sink. Board overheated. Ambient temperature beyond normal operating range. (2)	Verify that air vents are not obstructed. Check air filter. Reduce ambient temperature. Contact an authorized service agency.

Error Code (Display)	Problem	Action
E24 + 	Sensor error from CPU. Board overheated. Ambient temperature beyond normal operating range. (2)	Verify that air vents are not obstructed. Check air filter. Reduce ambient temperature. Contact an authorized service agency.

-  **DANGER** If the plug is not safely accessible, the device must be switched off at the main circuit breaker.
- (1)
- (2) The appliance switches off immediately.



WELBILT®
Bringing innovation to the table

WWW.WELBILT.COM

Welbilt provides the world's top chefs, and premier chain operators or growing independents with industry leading equipment and solutions. Our cutting-edge designs and lean manufacturing tactics are powered by deep knowledge, operator insights, and culinary expertise.

All of our products are backed by KitchenCare® – our aftermarket, repair, and parts service.

- | | | | | | |
|---------------|---------------|--------------|-----------|--------------|--------------|
| ▶ CLEVELAND | ▶ DELFIELD® | ▶ FRYMASTER® | ▶ KOLPAK® | ▶ MANITOWOC® | ▶ MERRYCHEF® |
| ▶ CONVOTHERM® | ▶ FITKITCHEN™ | ▶ GARLAND | ▶ LINCOLN | ▶ MERCO® | ▶ MULTIPLEX® |